

Precautions for safe driving	(1)
How to use the instrument	(2)
Usage of switch and storage box	(3)
Pre driving inspection	(4)
Correct driving operation	(5)
Common troubleshooting	(7)
Main technical parameters	(8)
The circuit principle diagram	(9)
Simple after-sales service	(10)
Warranty card user Union	(12)
Warranty card receipt	(13)

Dear users, welcome to use the products produced by our company, in order to obtain satisfactory service, please fill in the following form in the purchase of cars. Within one month, a copy of the invoice will be sent back to our company, and the foreign users will mail it according to the address provided by our company, so that our company can file and track the quality.

user	Company		
	Full name		TEL
	Postal address		
	Zip code		
	Date of purchase		
	Vehicle number	Invoice number	
	Frame number	Motor number	
	Battery number	Certificate No.	
	Distribution unit		
	Contacts	TEL	
First failure content			

Note: for users from other places, the local dealer will send the receipt to our company.

1	Headlight indicator	Display the status of headlight
2	Speedometer	Indicates travel speed
3	Direction indicator	This light flashes during steering operation
4	Voltmeter	Indicates battery voltage status
5	Power indicator	Light on indicates power on

- (1) Headlight indicator: turn the headlight switch, which indicates that the headlight is turned on and the headlight is on.
- (2) Speedometer: the position of the pointer is the speed at which you ride, in terms of the number of miles per hour, and the safe speed of the vehicle is 20km/h.
- (3) Battery indicator: turn on the steering switch, whether left or right, the light flashes regularly, indicating that the left or right steering lights at the front and rear end are turned on.
- (4) Voltage meter: turn on the power switch, the position of the voltage meter indicates the capacity of the power supply, when referring to the green edge, the battery capacity is about 60% of its rated capacity. When referring to the lower edge of yellow, the battery capacity is about 40% of its rated capacity. Therefore, when the yellow indicator is close to the yellow middle, please charge in time when you are close to the undervoltage indicator.
- (5) Power supply indicator: turn on the power supply. The lamp indicates that the power supply is turned on.

User link (users can guarantee with this link)

Date of purchase: mm / DD / 20		NO:	
User name	Subscriber phone	User address	
Model name	Invoice number	Frame number	
Motor number	Battery number	Charger, controller model	
Warranty unit	Warranty address		
Person in charge	TEL	Zip code	
User signature	Seal of warranty unit		

Be aware of the traffic rules: Please be aware of the driving with the safe speed (no less than the speed of the car's 20km/h).

Before you start, familiarize yourself with the interior of this car. Then, find out the location, or how to fully make the full use of all the car as familiar with its structure, this is not based on safety.

⚠ Warning Do not use or avoid uncomfortable and non-driving performance to drive. Driving with one hand or throwing hands, drunk driving is very dangerous.

⚠ Please not attempt to allow any other person to drive.

⚠ Run and walk on the ground because of the handle of the ground. Then, we should avoid driving on the road, wet and rainy road, especially should remember: car should not drive on the road and wet and rainy road to prevent accident.

⚠ Use helmet correctly: Wear the helmet correctly on your head and fasten the belt.

⚠ Wear correctly: Wear you should bright color, the web body move freely, right, clothes does not cover clothing. Wear shoes with soles hard is possible.

Be careful In order to facilitate maintenance, maintenance and service, each car produced by our company has its frame number and motor number, in order to help the distribution site to provide you with better service. The frame code number is important on the outer cover and cover of the motor under the saddle seat.

⚠ The seat should not be too heavy.

When the load is different from the non-load, the handle has different sense of control. too much load, the handle is easy to tremble and dangerous, the rated load of the car is 1 person, the loading box contains the zkg, the lower limit of the front box is 10kg, the upper limit is 20kg.

⚠ Remember, please do not exceed the specified position, no arbitrary loading that is carried on the car. 2 Do not put luggage and other items into the car. In order to avoid damage to the protective plate, do not put items under the cushion (between the cushion and the seat of the handle).

Be careful Remember, cleaning the motor and handle of the handle.

⚠ Please be able to detect the fault of checking before riding, check regularly, wash oil, oil, dirt wash oil and oil with soft cloth.

1 When washing the car, do not directly spray water on the brake drum, motor and front and rear shafts to prevent the influence from affecting the performance and life of the brake drum, motor and front and rear shafts.

2 Do not use steam or high pressure water to clean the motor and front and rear shafts.

Head and neck

1. Headrest recline angle, the backrest recline angle
2. Headrest recline angle, the backrest recline angle
3. Headrest recline angle, the backrest recline angle
4. Headrest recline angle, the backrest recline angle
5. Headrest recline angle, the backrest recline angle
6. Headrest recline angle, the backrest recline angle
7. Headrest recline angle, the backrest recline angle
8. Headrest recline angle, the backrest recline angle
9. Headrest recline angle, the backrest recline angle
10. Headrest recline angle, the backrest recline angle

Torso

1. Headrest recline angle, the backrest recline angle
2. Headrest recline angle, the backrest recline angle
3. Headrest recline angle, the backrest recline angle
4. Headrest recline angle, the backrest recline angle
5. Headrest recline angle, the backrest recline angle
6. Headrest recline angle, the backrest recline angle
7. Headrest recline angle, the backrest recline angle
8. Headrest recline angle, the backrest recline angle
9. Headrest recline angle, the backrest recline angle
10. Headrest recline angle, the backrest recline angle

Arms and hands

1. Headrest recline angle, the backrest recline angle
2. Headrest recline angle, the backrest recline angle
3. Headrest recline angle, the backrest recline angle
4. Headrest recline angle, the backrest recline angle
5. Headrest recline angle, the backrest recline angle
6. Headrest recline angle, the backrest recline angle
7. Headrest recline angle, the backrest recline angle
8. Headrest recline angle, the backrest recline angle
9. Headrest recline angle, the backrest recline angle
10. Headrest recline angle, the backrest recline angle

Only take hot from the water. *Heat, pressure, or steam is extremely dangerous.*

• Rainy and snowy weather: the road surface is wet and easy to slide sideways, to control, drive slowly, road and brake ahead of time. When the water on the road exceeds the lowest position of the outer edge of the wheel motor, please do not let the water to avoid the performance of the car.

• After replacing the wheel of water, special attention should be paid to the working condition of the brake, and the braking effect may be reduced.

After-sale service

Dear customers, we have used the electric bicycle system of the product, and have effectively protected your legitimate rights, improves the overall livability system of the product, and facilitate the performance of three packages of obligations to you. We have issued this card properly. Credit card and car purchase invoice can get three guarantees of service to the car dealer.

Three guarantees of service principle

1. When you buy a car, you should check on the spot, credit, buy correctly, and have the right to provide the correct use method and correct maintenance method. The car dealer should be responsible for the correct use and correct maintenance of the car.

2. Users should operate correctly according to the product manual. In the event of a performance failure caused by a manufacturer, the car dealer should be responsible for the correct use and correct maintenance of the car.

3. The Product Quality Law of the people's Republic of China, the Consumer Rights and Interests Protection Law of the people's Republic of China, and the Consumer Rights and Interests Protection Law of the people's Republic of China.

The company is still responsible for repairing the faults outside the scope of the "three packages" and the main parts after the warranty period.

4. Beyond the "three packages" period after the warranty expires, the company - law as the law - factory price win-win, but the car dealer is not responsible for the repair of the car.

Scope and duration of the three packages of repairs

1. The company will replace the whole vehicle or parts of the whole vehicle apart natural, unexpected, the - wedding, - fracture and - fracture, and the car dealer will be replaced and repaired within two years.

2. The company will replace the whole vehicle or parts of the whole vehicle apart natural, unexpected, the - wedding, - fracture and - fracture, and the car dealer will be replaced within one year or be repaired within two years, whichever is earlier.

3. Failure of controller, charge, electric display instrument, speed regulating handle, brake power off switch, etc., which can be repaired within one year.

[illegible]

Serial number	Fault phenomenon	Cause of failure	Elimination method
1	Adjustment battery or maximum speed reduction	<ul style="list-style-type: none"> ① The battery voltage is too low. ② The speed regulating torque is damaged. ③ The spring in the hand of the speed controller is stuck or out of order. 	<ul style="list-style-type: none"> ① Adjust battery power. ② Tighten up spring. ③ First a spring to replace the spring.
2	Turn on the power, the motor does not start	<ul style="list-style-type: none"> ① loosening of battery wiring; ② damage of speed regulating handle; ③ The wire pressing of the motor is loose or damaged. 	<ul style="list-style-type: none"> ① Tighten connection. ② First a spring to replace.
3	Insufficient current during phase change	<ul style="list-style-type: none"> ① Insufficient line pressure. ② The speed regulating torque is damaged. ③ Many spring, strong damaged, require break start, heavy load. 	<ul style="list-style-type: none"> ① Set correct pressure. ② Check the phase pressure in hand contact or the spring to replace it. ③ Check the phase pressure in hand contact or the spring to replace it. ④ Check spring damaged.
4	Change motor speed and change does not change	<ul style="list-style-type: none"> ① change motor battery wiring; ② battery box safety wire burned; ③ change speed of the speed controller. 	<ul style="list-style-type: none"> ① Tighten battery and connection. ② replace fuse. ③ wiring cable. ④ replace speed controller.
5	Other faults	<ul style="list-style-type: none"> ① When you encounter a fault that cannot be solved by yourself or that cannot be determined under the above guidance. ② When the motor, controller, charger and battery pack of the motor are damaged. 	<p>It is best if the fault is reported to the supplier or maintenance staff, especially for the controller, the new guide is applicable. In the past, often "I'm sorry our warranty combined".</p>

Serial Number	Main Technical Parameters	Serial Number	Main Technical Parameters
1	Nominal motor power: 1000 W	9	Speed limits: 20 / 26 / 32 km/h
2	Battery type: Lithium	10	Indicated range: 60 km max.
3	Nominal voltage: 60 V	11	Water protection: IPX5-IPX6
4	Battery capacity: 20 Ah	12	Use in rain: Yes
5	Theoretical battery energy: 1200 Wh	13	Net weight: 70 kg
6	Frame size: 14 × 3.00 Tire type: Tubeless	14	Maximum noise level: 60 dB
7	Charging time: 6-8 h	15	Undervoltage protection: 52 ± 1 V
8	Maximum speed: 60 km/h	16	Overcurrent protection: 25-30 A
		17	Energy consumption: 2.6-3.0 kWh/100 km



USER MANUAL

E-MOTO V10